PARTS LIST AND DRAWING / LISTE ET SCHEMA DES PIÈCES / LISTA Y DIAGRAMA DE PIEZAS

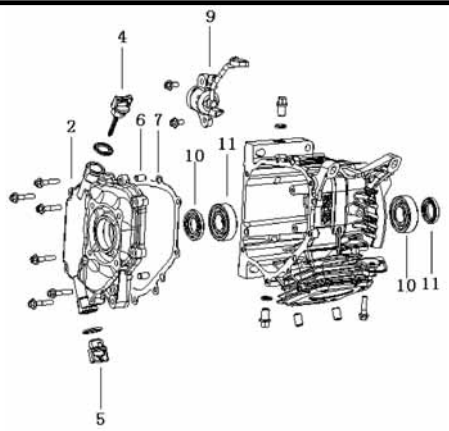

CRANKCASE ASSEMBLY / ENSEMBLE DU CARTER / CONJUNTO DE CÁRTER

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
2	0067041	Cover, crankcase	Couvercle	Tapa	1
4	0067042	Gauge, engine oil	Jauge	Manómetro	1
5	0067043	Cover, oil	Couvercle	Tapa	1
6	0067044	Guide, dowel	Guide	Gulá	2
7	0067045	Spacer, crankcase	Entretoise	Espaciador	1
9	0067046	Sensor assembly, fuel	Ensemble de détecteur	Conjunto de sensor	1
10	0067047	Oilseal assembly	Ensemble de joint	Conjunto de sello	2
11	0067048	Bearing	Roulement	Cojinete	2

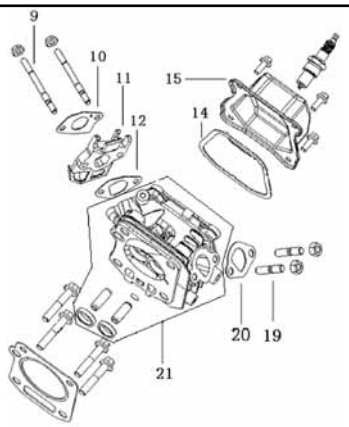

CYLINDER HEAD ASSEMBLY / ENSEMBLE DE TETE DE CYLINDRE / CONJUNTO DE CABEZAL DE CILINDRO

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
9	0067049	Bolt, intake pipe	Boulon	Perno	2
10	0067050	Spacer	Entretoise	Espaciador	1
11	0067051	Mattress, heat insulating	Matelas	Colchón	1
12	0067052	Spacer	Entretoise	Espaciador	1
14	0067053	Spacer, seal	Entretoise	Espaciador	1
15	0067054	Clapboard	Planche en clins	Tablilla	1
19	0067055	Bolt, exhaust pipe	Boulon	Perno	2
20	0067056	Spacer, exhaust pipe	Entretoise	Espaciador	1
21	0067057	Cylinder head	Tête de cylindre	Cabezal de cilindro	1

PARTS LIST AND DRAWING / LISTE ET SCHEMA DES PIÈCES / LISTA Y DIAGRAMA DE PIEZAS

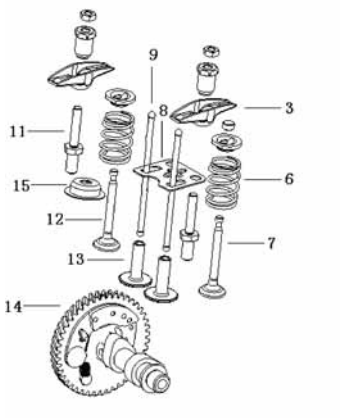

INTAKE & EXHAUST ASSEMBLY / ENSEMBLE DE ADMISSION ET ÉCHAPPEMENT / CONJUNTO DE ADMISIÓN Y DESCARGA

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
3	0067058	Arm	Bras	Brazo	2
6	0067059	Spring, valve	Ressort	Resorte	2
7	0067060	Valve, exhaust	Soupape	Válvula	1
8	0067061	Guide plate, connecting stud	Plaque	Placa	1
9	0067062	Rod, connecting	Tige	Varilla	2
11	0067063	Adjusting stud, valve clearance	Clou	Semental	2
12	0067064	Valve, intake	Soupape	Válvula	1
13	0067065	Stud, connecting	Clou	Semental	2
14	0067066	Camshaft	Arbre à cames	Arbol de levas	1
15	0067067	Oil seal, valve	Joint	Sello	1

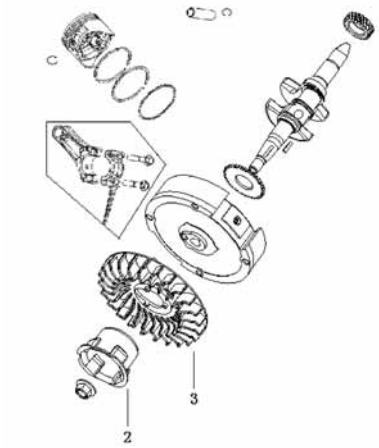

CRANKSHAFT & FLYWHEEL ASSEMBLY / ENSEMBLE DE VILEBREQUIN ET VOLANT-MOTEUR / CONJUNTO DE CIGÜEÑAL Y VOLANTE

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
2	0067068	Ratchet wheel	Roue	Rueda	1
3	0067069	Fan	Ventilateur	Ventilador	1

PARTS LIST AND DRAWING / LISTE ET SCHEMA DES PIÈCES / LISTA Y DIAGRAMA DE PIEZAS

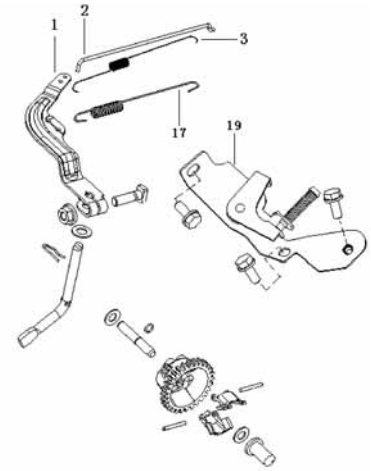

CENTRIFUGAL ADJUSTMENT ASSEMBLY / ENSEMBLE DE AJUSTEMENT CENTRIFUGE / CONJUNTO DE AJUSTE CENTRIFUGO

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0067070	Arm	Bras	Brazo	1
2	0067071	Rod, tension	Tige	Varilla	1
3	0067072	Spring 2, tension	Ressort 2	Resorte 2	1
17	0067073	Spring 1, tension	Ressort 1	Resorte 1	1
19	0067074	Handle assembly	Poigneé	Manija	1

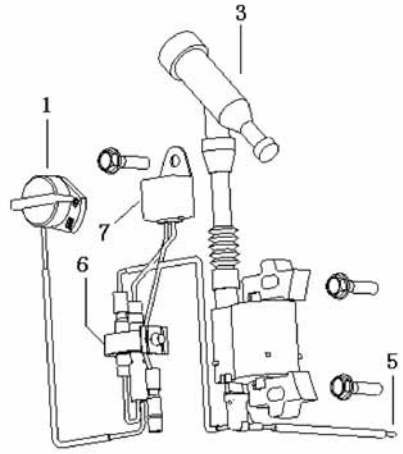

IGNITION SYSTEM ASSEMBLY / ENSEMBLE DE SYSTEME D'ALLUMAGE / CONJUNTO DE SISTEMA DE IGNICION

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0067075	Switch assembly, ignition	Interrupteur	Interruptor	1
3	0067076	Winding assembly, ignition	Ensemble de remonter	Conjunto de enrollar	1
5	0067077	Connecting wire assembly	Fil	Alambre	1
6	0067078	Clip	Attache	Presilla	1
7	0067079	Switch, electronic	Interrupteur	Interruptor	1

PARTS LIST AND DRAWING / LISTE ET SCHEMA DES PIÈCES / LISTA Y DIAGRAMA DE PIEZAS

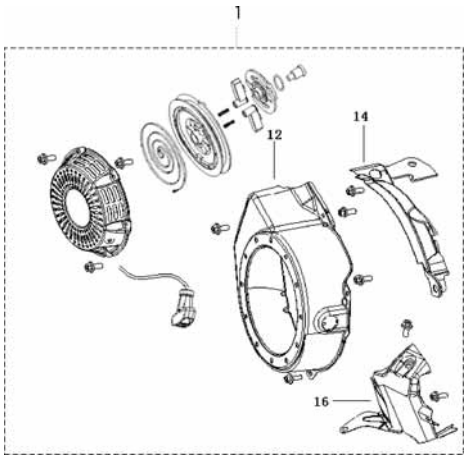

RECOIL STARTER ASSEMBLY / ENSEMBLE DE RECULER LE DÉMARREUR / CONJUNTO DE ARRANQUE RETRÁCTIL

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0067080	Recoil starter assembly	Ensemble de reculer le démarreur	Conjunto de arranque retráctil	1
12	0067081	Cowling	Capot	Cubierta de proa	1
14	0067082	Plate 1, diversion	Plaque 1	Placa 1	1
16	0067083	Plate 2, diversion	Plaque 2	Placa 2	1

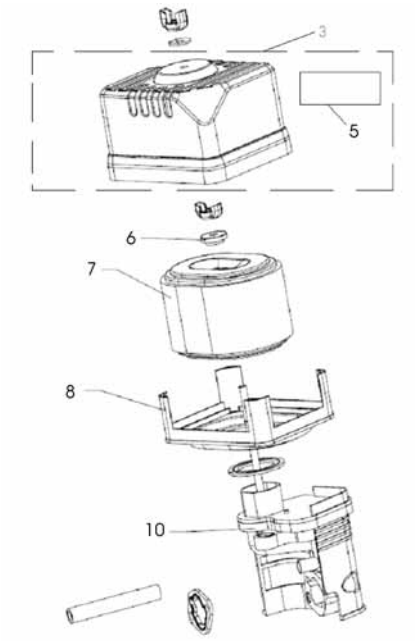

AIR CLEANER ASSEMBLY / ENSEMBLE DE NETTOYEUR À AIR / CONJUNTO DE LIMPIADOR DE AIRE

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
3	0067084	Air filter cover assembly	Couvercle	Tapa	1
5	0067085	Label, air cleaner maintenance	Etiquette	Etiqueta	1
6	0067086	Seal spacer	Joint	Sello	1
7	0067087	Element, air cleaner	Élément	Elemento	1
8	0067088	Housing, air cleaner	Corps	Compartimiento	1
10	0067089	Body, air cleaner	Corps	Cuerpo	1

PARTS LIST AND DRAWING / LISTE ET SCHEMA DES PIÈCES / LISTA Y DIAGRAMA DE PIEZAS

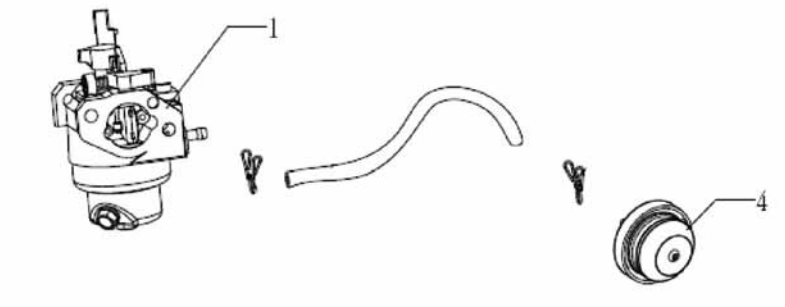

CARBURETOR ASSEMBLY / ENSEMBLE DE CARBURATEUR / CONJUNTO DE CARBURADOR

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0067090	Carburetor	Carburateur	Carburador	1
4	0067091	Bulb, primer	Ampoule	Bombilla	1

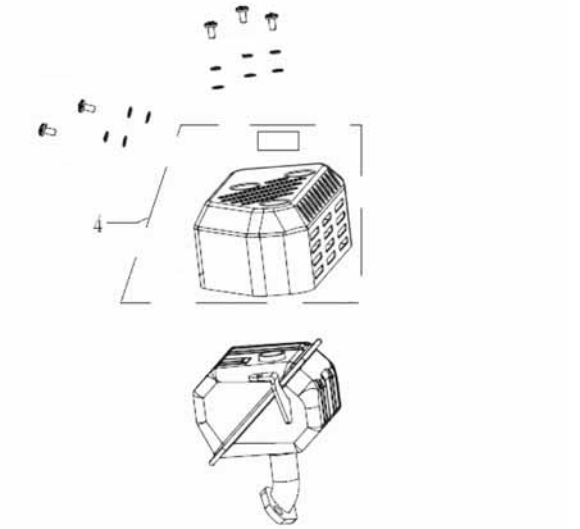

MUFFLER ASSEMBLY / ENSEMBLE DE SILENCIEUX / CONJUNTO DE SILENCIADOR

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
4	0067092	Muffler cover assembly	Couvercle, silencieux	Tapa, silenciador	1

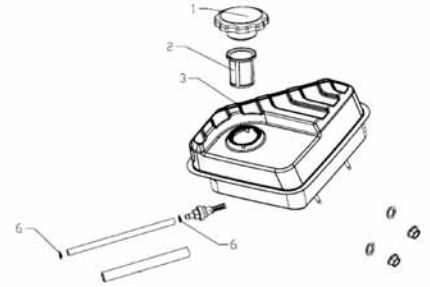

FUEL TANK ASSEMBLY / ENSEMBLE DE RÉSERVOIR DE CARBURANT / CONJUNTO DE TANQUE DE COMBUSTIBLE

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0067093	Fuel cap	Capuchon	Tapa de combustible	1
2	0067094	Filter net	Filtre	Filtro	1
3	0067095	Fuel tank	Réservoir de carburant	Tanque de combustible	1
6	0067096	Circlip	Attache	Presilla	2

PARTS LIST AND DRAWING / LISTE ET SCHEMA DES PIÈCES / LISTA Y DIAGRAMA DE PIEZAS

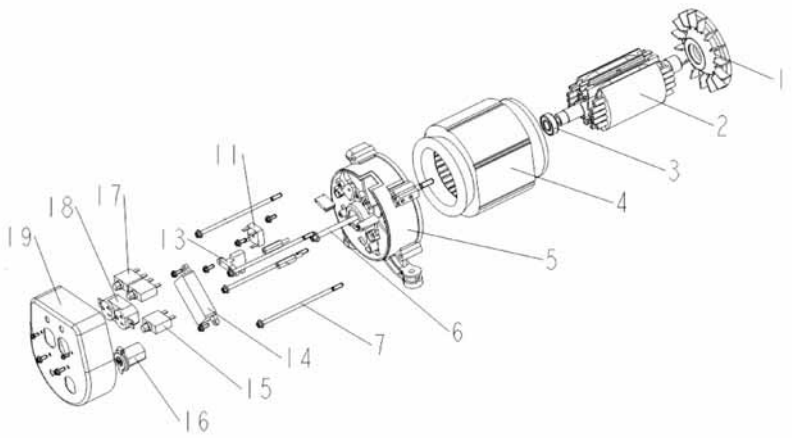

GENERATOR HEAD / TÊTE DE LA GÉNÉRATRICE / CABEZAL DEL GENERADOR (P/N 0067097)

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0067098	Impeller	Impeller	Impeller	1
2	0067099	Rotor 3 KW	Rotor	Rotor	1
3	0067100	Bearing, rolling	Roulement	Cojinete	1
4	0067101	Stator 3 KW 60 HZ	Stator	Estator	1
5	0067102	Motor casing	Revêtement	Cubierta	1
6	0067103	Bolt M8 x 230	Boulon M8 x 230	Perno M8 x 230	1
7	0067104	Bolt M6 x 160	Boulon M6 x 160	Perno M6 x 160	4
11	0067105	Rectifier	Redresseur	Rectificador	1
13	0067106	Brush module	Brosser le module	Cepille módulo	1
14	0067107	Voltage regulator	La tension régulatrice	El regulador del voltaje	1
15	0067108	Circuit Breaker DC	Disjoncteurs CC	Cortacircuitos CC	1
16	0061990	Receptacle DC	Prise CC	Receptáculo CC	1
17	0049071	Circuit Breaker 20 amp	Disjoncteurs 20 amp	Cortacircuitos 20 amp	2
18	0037762.01	Receptacle 5-20R	Prise 5-20R	Receptáculo 5-20R	1
19	0067109	Control box	Boîte de contrôle	Caja de control	1

MOUNTING FEET / PIEDS DE MONTER / PIES DE MONTAR

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
4	0067112	Foot, mounting	Pied de monter	Pie de montar	4

WARNING: To avoid possible personal injury or equipment damage, a registered electrician or an authorized service representative should perform installation and all service. Under no circumstances should an unqualified person attempt to wire into a utility circuit.

AVERTISSEMENT: Pour éviter toute blessure personnelle ou dommage à l'équipement, l'installation et tout entretien devralent être effectués par un électricien qualifié ou un préposé au service autorisé. En aucun cas, une personne non-qualifiée ne devrait essayer de faire le raccord au circuit principal.

ADVERTENCIA: Para evitar posibles lesiones físcas o daños materiales, es necesario que la instalación y todo el servicio sea realizado por un electricista matriculado o representatnte de servicio autorizado. Bajo ninguna circunstancia debe permitirse que una persona que no está capacitad trate de manipular cables dentro del circuito de servicio eléctrico.

PM0103002 SERIAL NUMBER LOCATIONS

The initial build of PM0103002 T-bar generators do not have a nameplate for the model and serial number. The serial number is stamped into the side of the engine.

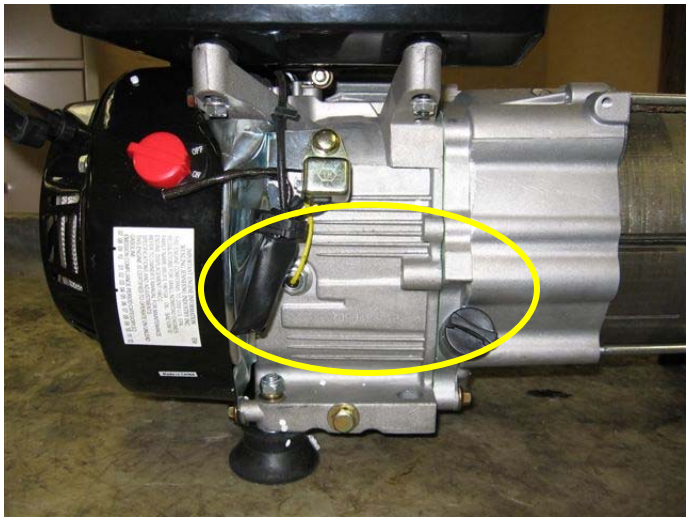

Future builds will include a nameplate with model and serial information.